


ASSEMBLY INSTRUCTIONS

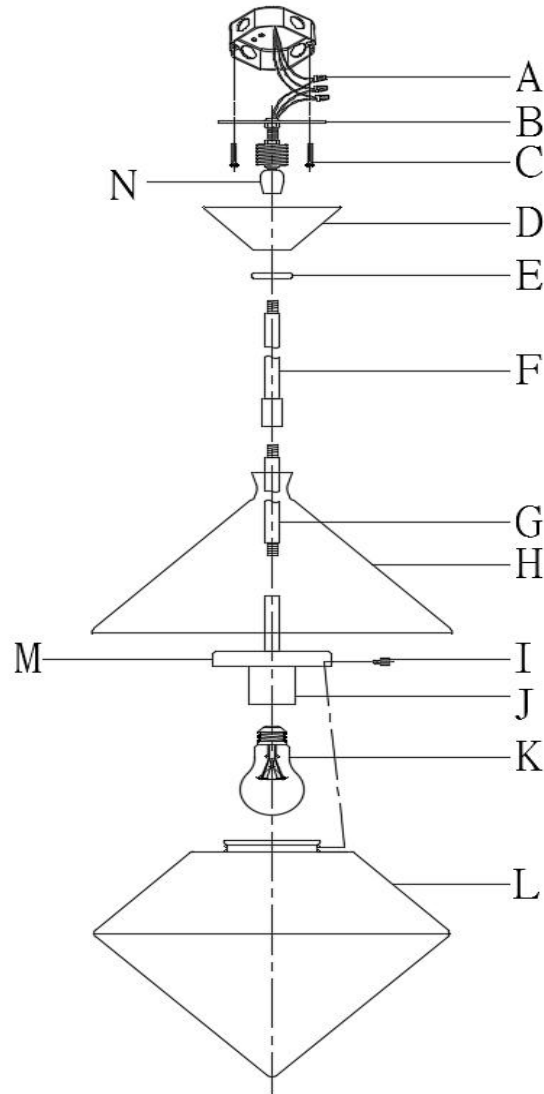

Sarnen Medium Pendant

Item# ARN 5356

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.
WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL.

IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING.

RETAIN ALL PACKING MATERIAL UNTILL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. Remove the mounting plate (B) from the canopy (D) by loosening collar ring(E).
3. Feed wire through the rod(G),rod(F),collar ring(E),canopy(D).
4. Thread the rod(G) to the glass holder(M).Slip the metal shade(H) through down the rod(G).
5. Thread the rod(F) to the rod(G).Slide the collar ring(E) and canopy(D) through down the rod(F).
6. Feed wire from rod(F) through the mounting plate(B), thread the rod(F) to the swivel(N) on the mounting plate(B).
7. Measure the wires and cut it to desired length. Be sure to be enough for connection to outlet supply wire.
8. Install the mounting plate(B) to the ceiling and secure with mounting screws(C).
9. Connect the ground wire from the fixture to the ground wire from the outlet box(usually green or copper in color).

IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.

10. Connect the fixture Neutral wire(White) from the fixture to the neutral wire(White) from the outlet box using wire nut(A).
11. Connect the fixture Hot wire(Black) from the fixture to the Hot wire(Black) from the outlet box using wire nut(A).

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.

12. Tuck the wire connections neatly into ceiling outlet box.
13. Slip canopy(D) flush to ceiling and secure with collar ring(E).
14. Insert the bulb(K)(not included) into the lamp socket(J).
15. Push up the metal shade(H),install the glass shade(L) to the glass holder(M) and secure with screws(I),then put down the metal shade(H).
16. Installation is completed, turn on power at fuse or circuit breaker.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co. Est. 1987